



## GROOVING BGF

Inserts .C18

Holders .C19



# BGF-HLD

## Advanced Grooving

- External holders for tangential mounted advanced grooving insert
- Clamp tightened by screw

Right-hand shown

Designation	H	B	WF	LF	LH	WT						Stock
<b>LEFT-HAND</b>												
<b>BGF-HLD 2020L</b>	20	20	30	150	45	-						⊙
<b>BGF-HLD 2525L</b>	25	25	30	150	45	-						⊙
<b>RIGHT-HAND</b>												
<b>BGF-HLD 2020R</b>	20	20	30	150	45	-						●
<b>BGF-HLD 2525R</b>	25	25	30	150	45	-						⊙

★ 1st choice, ☆ suitable, ● stock standard, ⊙ non-stock standard (no MOQ), ○ non-stock standard (MOQ), ▲ upcoming product, ▽ stock exhaustion

Spare parts	Insert screw	Flag wrench	Clamp	Clamp screw	L wrench
<b>BGF-HLD</b> ○○○○L	NT-ST50110T20	NT-FT15	NT-CS300L	NT-SC300	NT-WR040
<b>BGF-HLD</b> ○○○○R	NT-ST50110T20	NT-FT15	NT-CS300R	NT-SC300	NT-WR040

**RELIABLE CLAMPING**

1. Install the insert and screw lightly
2. Firmly fix the clamp
3. Tighten the insert screw completely.

**HOLDER AND INSERT COUPLING**

Holder R → Insert R

Holder L → Insert L